

VCR2PC Driver Update Installation Instructions

1. To update your VCR2PC drivers to the latest version, visit www.ion-audio.com/vcr2pc
2. Once the webpage opens, click on **Documents and Downloads**, then click the link for the driver which appropriate for your region or country.

- [VCR 2 PC - NTSC Hardware Driver v1.43.07.50](#)
- [VCR 2 PC - PAL Hardware Driver v1.43.07.50](#)

3. Once downloaded to your computer, uncompress the file titled:

VCR2PC_NTSC_Driver_v1.43.07.50.zip (or **VCR2PC_NTSC_Driver_v1.43.07.50.zip**).

The file you'll download is a .zip file that needs to be **uncompressed**, or **un-zipped**. Many computers come with a utility pre-installed to un-zip .zip files. Simply double-clicking on the .zip file will often open the utility and allow you to uncompress the file.

If double-clicking the file does not automatically uncompress it, try right-clicking the file, and selecting **Explore**, or **Extract**. These options should allow you to access the contents of the file.

If needed, you can download a free un-zipping utility for the PC called **WinRar** at <http://download.com>

4. Make sure that you have downloaded and unzipped/uncompressed the file. Once uncompressed, you will have one new file on your desktop:

VCR2PC_NTSC_Driver or **VCR2PC PAL Driver** (depending on your region).

5. Connect the VRC2PC to your computer via USB.
6. Choose **Settings**, then **Control Panel**.
7. In the window that opens, double-click the control panel titled **System**. If there is no item titled **System** listed in the Control Panels window, click the link in the upper-left of the window titled **Switch To Classic View**. The **System** Control Panel should now be visible to the right. Double-click it to open the **System Properties** window.
8. At the top of the **System Properties** window that opens, click the tab titled **Hardware**.
9. Then click the button labeled **Device manager**. You will be presented with a list of all the components installed on your computer.

Under the **Sound Video and Game Controlers** section, **VRC2PC** should be listed.

10. Right-click **VRC2PC** and choose **Update Driver**.
11. The **Hardware Update Wizard** will open.
12. Click **Install from a list or a specific location (advanced)** click **Next**.
13. Check the **Include this location in the search** box and browse to the unzipped folder click **Next**.

14. The Wizard will search for the driver, and will try to finish installing it.

You may be presented with a window that says:

Please select the best match for your hardware from the list below.

If this screen appears, choose **VRC2PC**, and click **Next**. When completed, the Wizard will present a page that says, **The wizard has finished installing the software...**

15. Click **Finish**.