


Attaching the Turntable Belt

1. Make sure the power adapter is not connected to the Pro200BT.
2. Remove the three white stabilisers from the platter by turning them either clockwise or anti-clockwise.
3. Remove the platter by carefully lifting this upwards.
4. Place the platter upside-down on a flat surface and position the black belt so that it is wrapped around the underside of the platter's inner ring, centred straight and free of any twists

5. Move your thumb through the platter's larger belt window and carefully lift part of the belt up. Flip over the platter and place the belt over the groove in the white motor spindle, while aligning the platter back onto the middle spindle (see image on right).

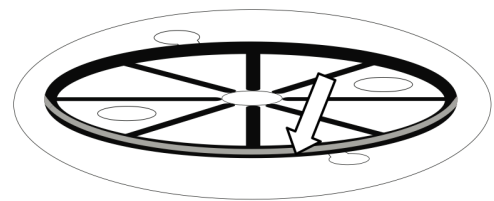

6. Connect the power adapter to the turntable and power on the turntable.
7. Push the **Start** switch to see if the platter motor spins. If the platter does not spin, try the steps listed above again.